

# ATR-500 Quick Reference



POWER – Press ON/OFF

VOLUME – Press VOL/SQ once, lower knob

SQUELCH – Press VOL/SQ twice, lower knob

IC SQUELCH (VOX) – Press VOL/SQ three times, lower knob

FREQUENCY MEMORY – Top knob selects memory frequencies

FREQUENCY ENTRY – Top knob to SET, bottom knob for MHz, press ⇔ and bottom knob for kHz

FREQUENCY SWAP – ⇕